

PIG FloodFence™ Water Diverter

Jointing Pin & Vertical Gasket Application

Please use the following instructions to assemble an Outer Corner for your FloodFence™ Water Diverter Barrier

Assembly Instructions:

- To deploy an outer corner – 2 x Inner corners and a jointing pin is required.
- Each Jointing pin includes 2 x gaskets.
- These loose gaskets should be adhered, simply peel off adhesive layer and stick one to each inner corner that make up the outer corner.



Jointing Pin



Inner Corner

PIG FloodFence™ Water Diverter



1. To deploy an Outer Corner – 2 x Inner corners (2 x PLSE316), and a Jointing Pin with 2 Gaskets, are required (1 x PLSE318).

2. 1 x Gasket should be applied on each of the two Inner Corners that make up the Outer Corner. Remove adhesive backing from the Gasket.




3. Apply the Gasket down the centre of the Inner Corner, aligning the angled end with the Gasket already in place along the edge of the Inner Corner.


PIG FloodFence™ Water Diverter



4. Fold the Gasket over the edge, and continue to apply along opposite side of Inner Corner.

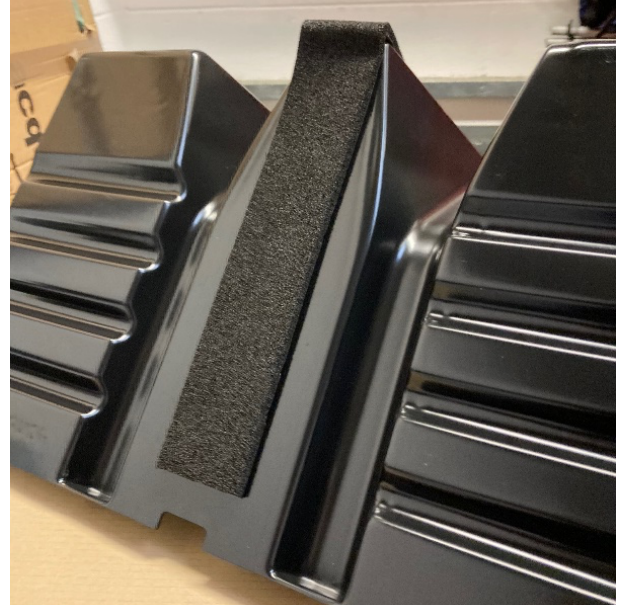

5. Repeat with second Inner Corner & Gasket.

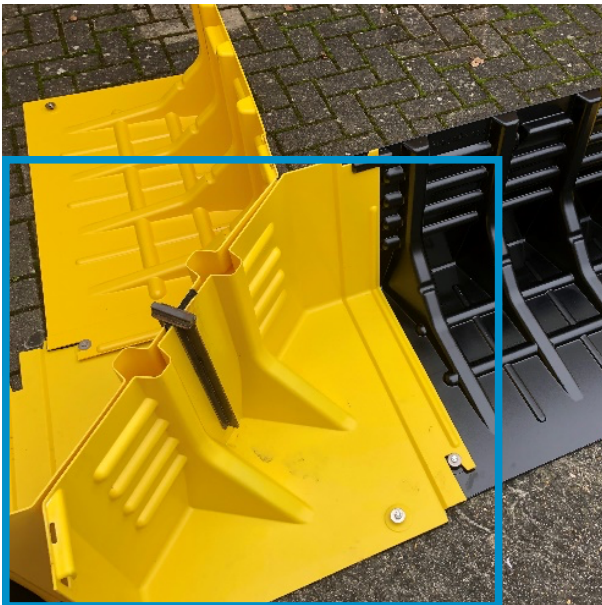

6. Two Inner Corners are then deployed back to back, with the Jointing Pin positioned to compress the Gaskets against each other, thus creating an Outer Corner.